






Crew Cab, Extended Cab and Regular Cab(2020-)

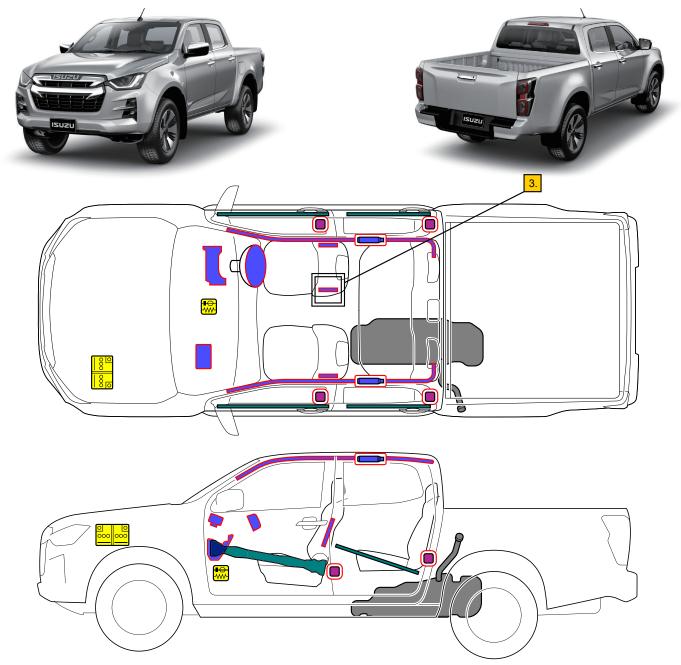

Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS contro	ol unit		Pedestrian protection active system
3	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requ special atte	U		
0 00 000 000	Battery low voltage	$\frac{1}{2}$	Ultra capacitor, low voltage		Fuel tank		Gas tar	ık		Safety valve
	High voltage battery pack	2	High voltage power cable / component	2	High voltage disconnect		Fuse box disabling high voltage system		<mark>-14</mark> -	Ultra capacitor, high voltage
	Fuel tank									
content Diesel					1	D No.		Versi	on No.	Page No.
					MPA-TF-RSE-2001AU-01 01 1 of 4					1 of 4




Identification / recognition 1




2. Immobilization / stabilization / lifting

- 1. Block wheels and set parking brake.
- 2. Operate the selector lever to "P" position. (automatic transmission)

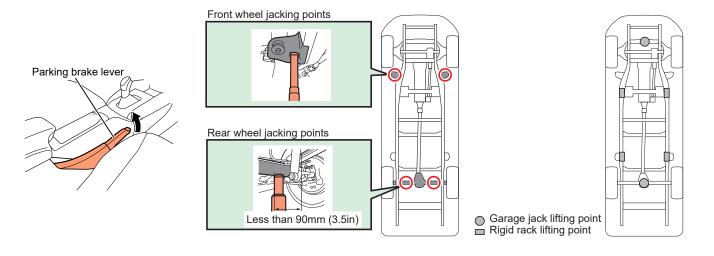

Disable direct hazards / safety regulations 3

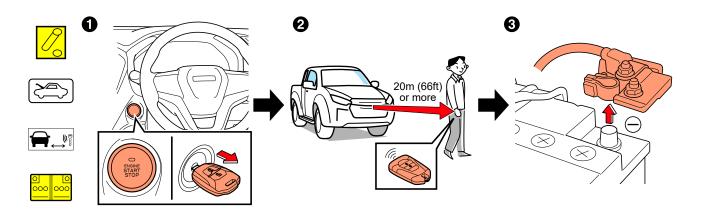



Do not apply excessive force to nor strongly hit the airbag installation area.


Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark 3. on page1.



ID No.	Version No.	Page No.	
MPA-TF-RSE-2001AU-01	01	2 of 4	



4. Access to the occupants

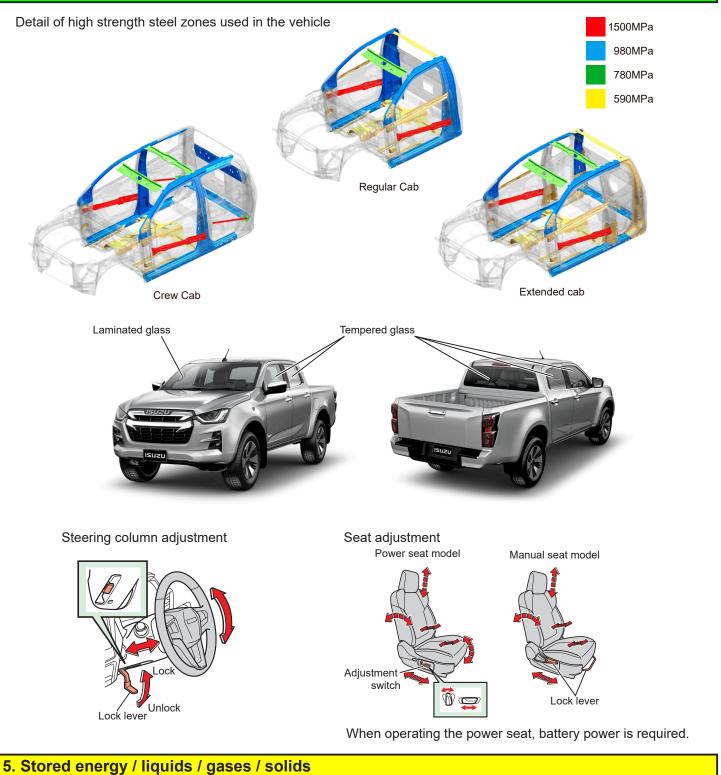

<u>0</u> 000 000		12V	
		76	
*		530 g	
		Varsian No.	Page No.

ID No.	Version No.	Page No.	
MPA-TF-RSE-2001AU-01	01	3 of 4	




6. In case of fire





8. Towing / transportation / storage

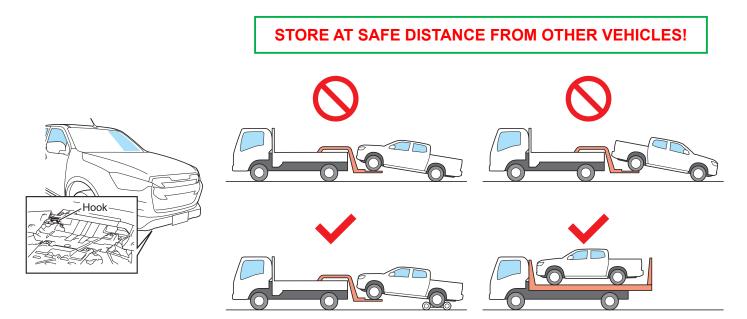

10. Explanation of pictograms used

	Smart key distance	Risk of flammability
	Caution	Risk of damaging human health
*	Air-conditioning component	Risk of acute toxicity
	Bonnet	Risk of an explosion
	Use water to extinguish the fire	Risk of corrosive material / substances
2	Device to shut down power in vehicle	

ID No.	Version No.	Page No.	
MPA-TF-RSE-2001AU-01	01	4 of 4	